

Measuring a basic window.



How you measure depends on where you want your blind to go.

It can hang:

On the inside of your window (this is called the **inside** recess).

On the outside your window (this is called an Actual fitting).

Most of our blinds can be fitted into the front of your window frame or wall, or into the top lintel.

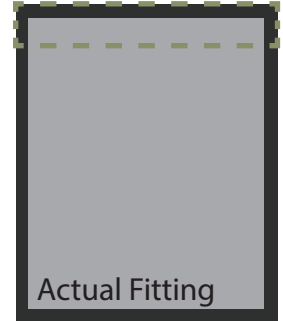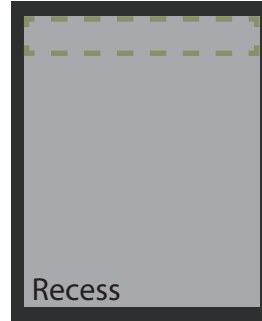


Make sure you have a tape measure.







Measure to the nearest millimetre if you're using centimetres. To make it easier to order when typing in your measurements on our site.

Whatever type of blind you're measuring for, follow our instructions precisely and don't make any adjustments for fittings and headrails.

Make allowance for the position of window handles and tiles.

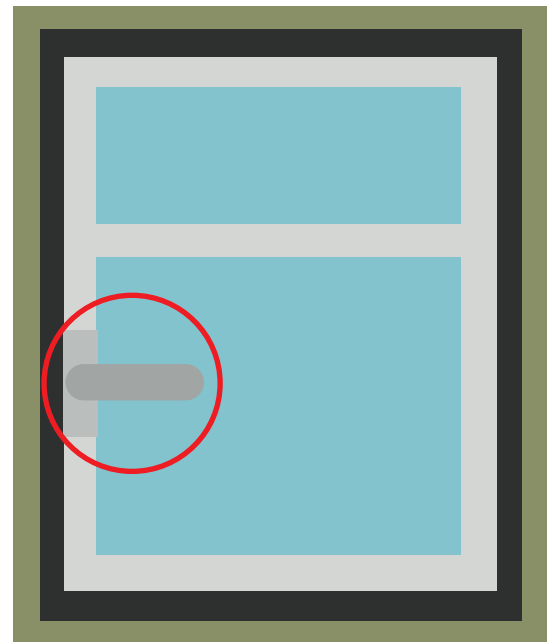

Basic window measurements comply for single windows only and these instructions work for all the blinds we supply, inside and outside of the recess.

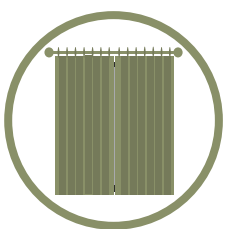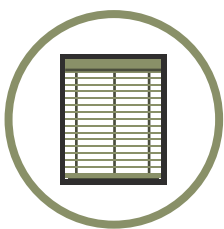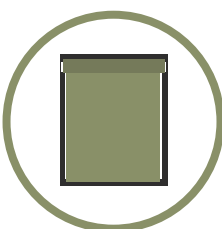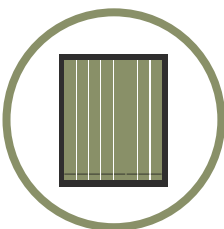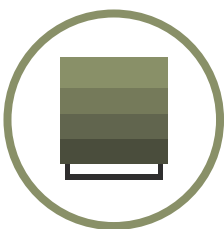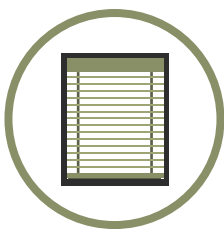

For more advice email us at advice@directblindsandcurtains.co.uk