

## Fitting a Curtain inside the recess

This article refers to inside the recess only

1. Before fitting your Curtain always place the track inside the recess to check that the measurements are all correct.

We recommend you top fix

2. Before placing up your brackets measure the window handle remember to add atleast 5-10mm clearance for the handles, Place your brackets against the wall remembering clearance for the handles, mark the bracket holes clearly.

3. Once you have marked everything up drill into the marked areas for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole. We recommend longer screws for curtains.

4. When done you should be able to secure the brackets, add more brackets if the width of the track is large to ensure security of the weight.


5. Once all the fixings have been screwed in clip in the track and then pin in the curtain to the track making sure to start from the ends of the track to ensure you use all the track pin fixings.

6. Now you have fitted your curtain pull it too one side to open and then again to close.

Curtain accessories advice can be seen on this link.

7. Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.

Child Safety design may vary please refer to our child safety device page.

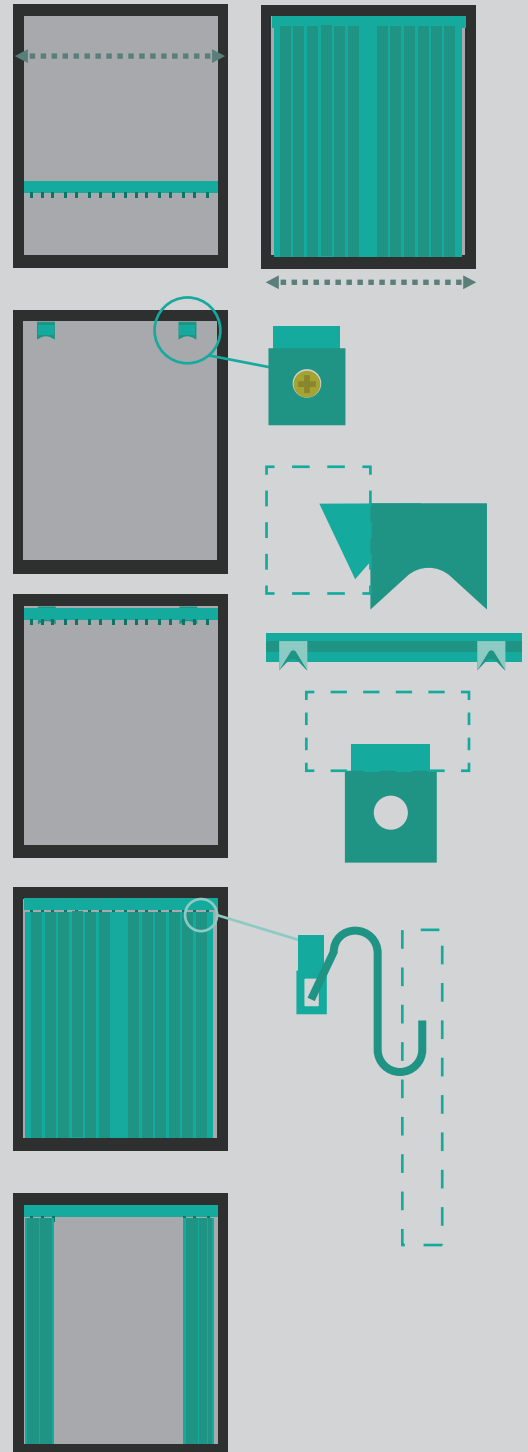

Drawings not to scale