

## Fitting a Curtain outside the recess

This article refers to Outside the recess only

1. Before fitting your Curtain always place the pole against the recess to check that the measurements are all correct.

2. Before placing up your brackets make sure to measure 150mm from the recess to mark your pole Brackets and too ensure the drop sits where you planned to have it.

3. Once you have marked everything up drill into the marked areas for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole. We recommend longer screws for curtains.

4. When done you should be able to secure the bracket and twist on the pole arms if the curtain pole is large in width make sure too add all the fixings.


5. Once all the fixings have been screwed in weave the rings of the curtain with the pole and then secure the pole onto the bracket arms and then tighten the little screws to ensure the pole stays in place.

6. Now you have fitted your curtain pull it too one side to open and then again to close.

Curtain accessories advice can be seen on this link.

7. Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.

Child Safety design may vary please refer to our child safety device page.

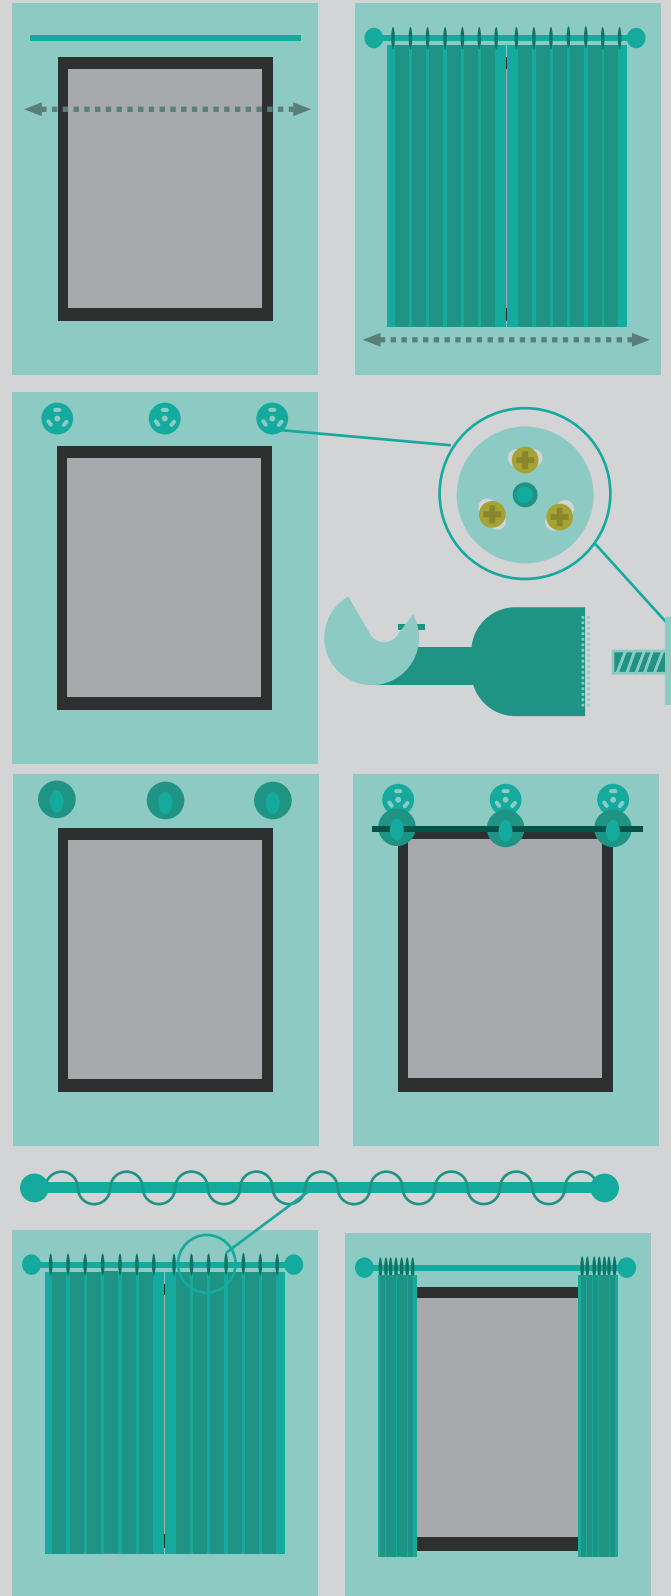

Drawings not to scale