

Fitting a Roman Blind outside the recess

This article refers to Outside the recess only

1. Before fitting your Roman blind always place the blind against the recess to check that the measurements are all correct.

2. Before placing up your brackets make sure to measure 150mm from the top of the recess to mark your brackets and too ensure the drop sits where you planned to have it.

3. Once you have marked everything up drill into the marked areas for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole.






4. When done you should be able to secure the bracket. Now repeat for the brackets. For longer width romans we recommend you add more brackets spaced out evenly so that you have more security on the weight distribution of the blind.

5. Once all the fixings have been screwed in its time to place the blind in the brackets. When hanging your roman place your blind in the brackets by clipping it into the front catches then push forward and tilt the headrail up into the back clips you should hear the blind clip in. (Brackets may vary)





6. Now you have fitted your roman blind pull on the chain slowly to let the roman down and then pull again to bring it up to the top.

7. **Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.**

Child Safety design may vary please refer to our child safety device page.

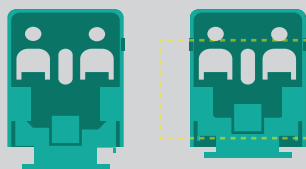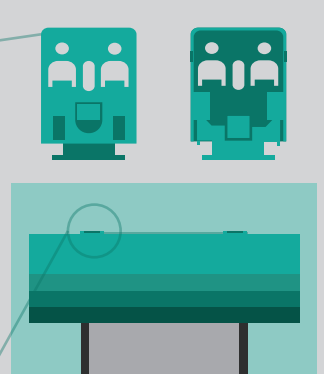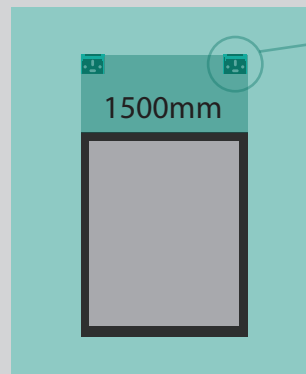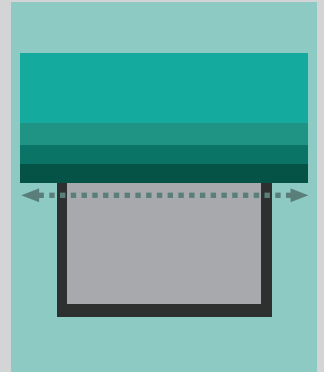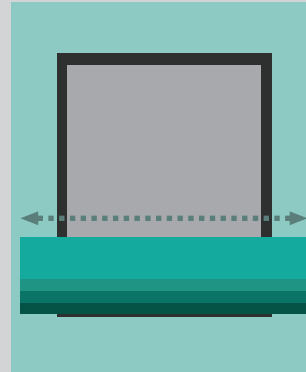

Push in then up to clip in the headrail

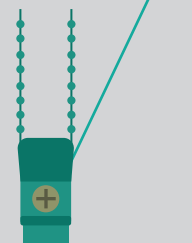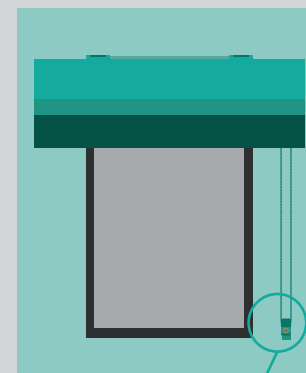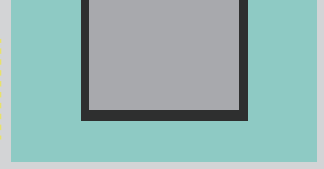

Drawings not to scale