

Fitting a Vertical Blind outside the recess

This article refers to outside the recess only


1. Before fitting your Vertical blind check that the measurements are correct with the window for outside the recess

Fixing back to the wall is recommended when outside of the recess.

2. Place your brackets to where you wish them to be, then with a pencil carefully mark the bracket holes to give yourself a spot to drill for the fixings. You don't want to go too far above the top recess.

3. Once you have marked everything up drill into the marked areas for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole.

4. When done you should be able to secure the bracket. Now repeat for the other brackets. For longer width Vertical tracks we recommend you add more brackets spaced out evenly so that you have more security on the weight distribution of the blind.








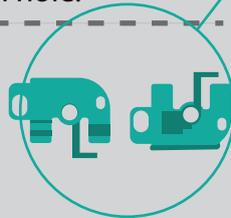


5. Once all the fixings have been screwed in its time to place the blind in the brackets. When hanging your vertical blind place your track in the brackets and close the arms of the bracket so they lock in place and secure the blind. Now clip in the slats. (Brackets may vary)

6. Now you have fitted your vertical blind clip in the wand and pull the wand towards you or away from you too open and close the blinds and twist the wand to open and close the slats.

7. **Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.**

Child Safety design may vary please refer to our child safety device page.

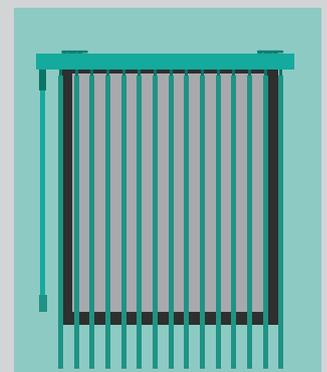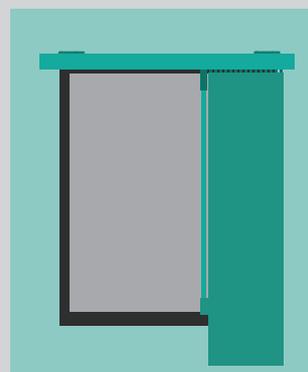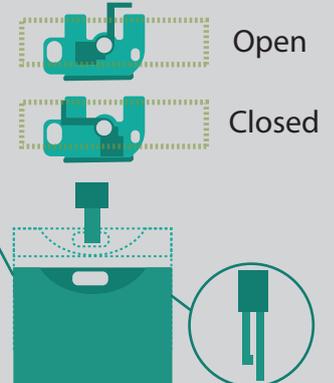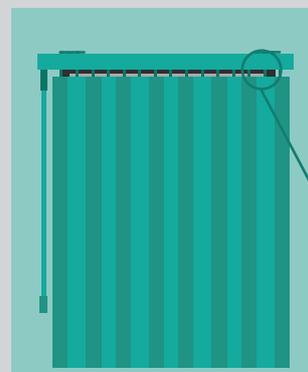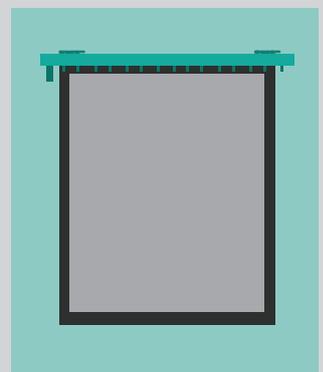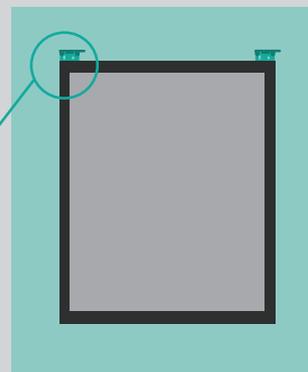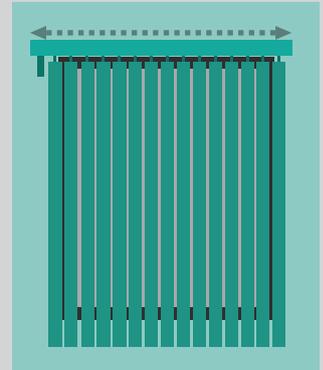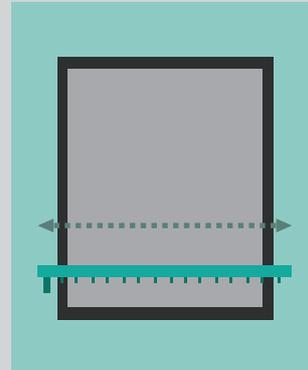

Drawings not to scale