

Fitting a Vertical Blind inside the recess

This article refers to Inside the recess only

1. Before fitting your Vertical blind always place the track inside the recess to check that the measurements are all correct.

2. Before placing up your brackets measure the window handle remember to add atleast 5-10mm clearance for the handles, Place your brackets against the wall remembering clearance for the handles, mark the bracket holes clearly.

3. Once you have marked everything up drill into the marked areas for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole.







4. When done you should be able to secure the bracket. Now repeat for the other brackets. For longer width Vertical tracks we recommend you add more brackets spaced out evenly so that you have more security on the weight distribution of the blind.

5. Once all the fixings have been screwed in its time to place the blind in the brackets. When hanging your vertical blind place your track in the brackets and close the arms of the bracket so they lock inplace and secure the blind. Now clip in the slats. (Brackets may vary)





6. Now you have fitted your vertical blind clip in the wand and pull the wand towards you or away from you too open and close the blinds and twist the wand to open and close the slats.

7. **Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.**

Child Safety design may vary please refer to our child safety device page.

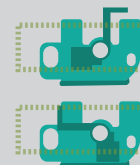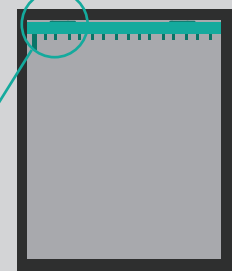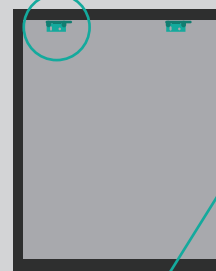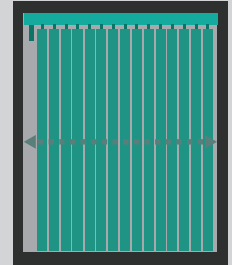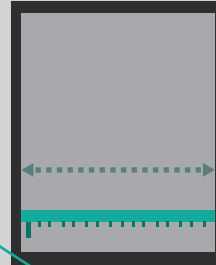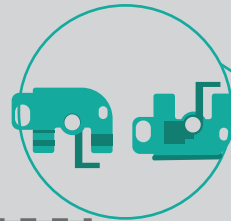

Open
Closed

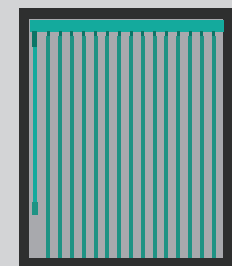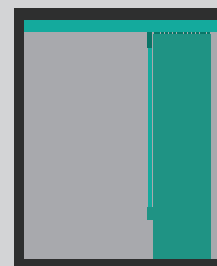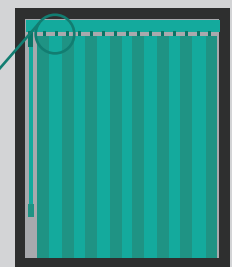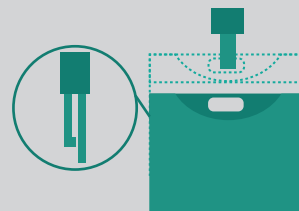

Drawings not to scale