




Measuring and Fitting

To ensure the best possible fit, always measure your window width to the plastic beading (not the rubber gasket).

Take two measurements of the width, at the top and the bottom of the window. If there is any variation always use the shortest width to order your blinds.

Take three measurements of the window drop. If there are any variations then always use the longest measurement.

You must measure accurately and to the nearest millimetre to ensure a good fit.

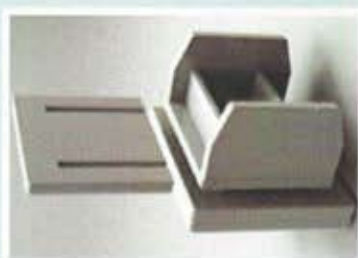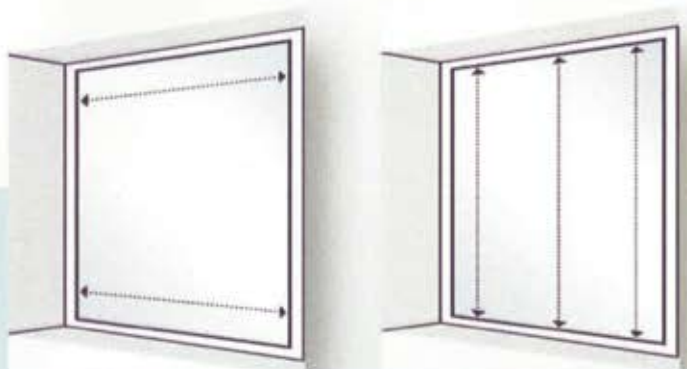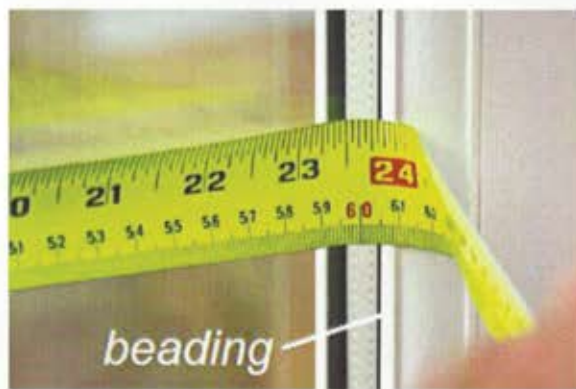

Unique end cap design and shim system to allow for fine adjustment at point of installation



Installation is quick and easy

The end cap on the head and bottom rails simply slide between the glass and rubber gasket which will not damage your window in any way. This unique pressure fit design ensures simple installation.



Slot

In the top left window corner, gently but firmly slot the left hand top rail tab in between the left hand rubber gasket and the glass.



Slide

Gently slide the top rail up the window and ease the right hand top rail tab between the rubber gasket and glass on the right hand side of the window. Do the same for the bottom rail.



Push

Push all top rails firmly towards the top of the window and all bottom rails firmly towards the bottom of the window.