


InsterShade


TOOLS REQUIRED

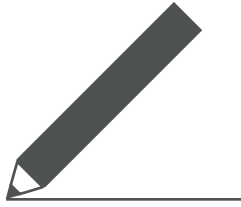

Pencil



Measuring Tape

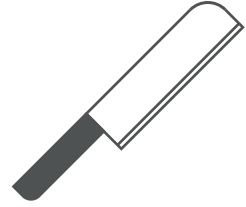

Knife



MEASURE

Measure the window top middle and bottom. Use the smallest measurement with a small deduction to stop it catching on the sides




CUT

Mark the measurement on your blind and cut the InsterShade to that size with a sharp knife.



PEEL

Peel the backing from the adhesive tape.

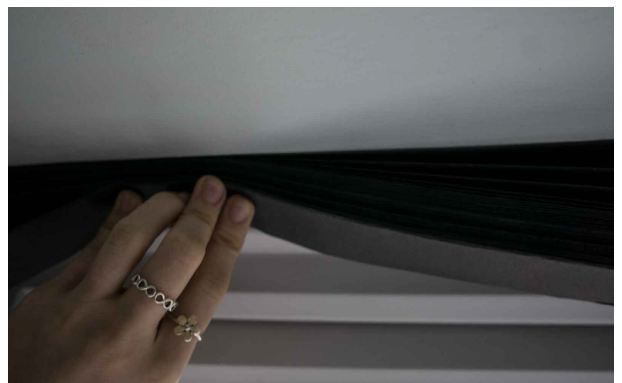

STICK

Stick the InsterShade in place.

TOP TIPS

Where possible use the full recess leaving a small gap between the blind and wall. Use a sharp knife, with a long straight blade, and pull gently backwards and forwards in a straight line. Ensure the area where the blinds is to be stuck is completely clean and dry. Clip the blinds bottom at the height required.